


70°-100° F (Install temp.)

- 1 This product is designed to be placed inside the window channel. Lower the window. Clean window channel thoroughly with alcohol pad.
- 2 Remove the red tape liner from all flanges.
- 3 Insert visor into window channel, rear flange first. Apply pressure along flanges to secure.
- 4 With visor in place, insert a clip onto the window channel behind the visor front and rear flanges. DO NOT SQUEEZE CLIP!
- 5 Ensure clips are fully seated inside the window channel by pressing into place with a putty knife.
- 6 Continue to apply pressure as the window is slowly closed. (See NOTE) Leave window closed for 24 hours to secure visor.
- 7 Install rear visor using same method as front.
- 8 NOTE: It is necessary to both hold the visor up into channel and pull the bottom of visor slightly outward while raising the glass to seat properly. If visor does not seat, roll window down and repeat.

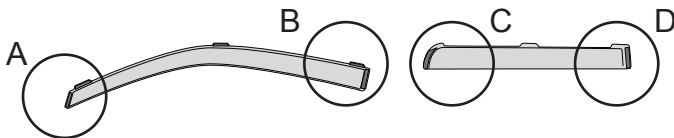

IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219



70°-100° F (Install temp.)

- 1 This product is designed to be placed inside the window channel. Lower the window. Clean window channel thoroughly with alcohol pad.
- 2 Remove the red tape liner from all flanges.
- 3 Insert visor into window channel, rear flange first. Apply pressure along flanges to secure.
- 4 With visor in place, insert a clip onto the window channel behind the visor front and rear flanges. DO NOT SQUEEZE CLIP!
- 5 Ensure clips are fully seated inside the window channel by pressing into place with a putty knife.
- 6 Continue to apply pressure as the window is slowly closed. (See NOTE) Leave window closed for 24 hours to secure visor.
- 7 Install rear visor using same method as front.
- 8 NOTE: It is necessary to both hold the visor up into channel and pull the bottom of visor slightly outward while raising the glass to seat properly. If visor does not seat, roll window down and repeat.



IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219