


IDEAL TAPE APPLICATION TEMPERATURE RANGE IS 70-100 DEGREES FAHRENHEIT!


- 1 THOROUGHLY CLEAN THE AREA WHERE THE BED CAPS ARE TO ADHERE.
- 2 BEFORE REMOVING ANY OF THE RED ADHESIVE BACKING TEST FIT THE PART TO ENSURE PROPER FIT.
- 3 ONCE SATISFIED WITH THE FIT, REMOVE THE RED BACKING FROM THE SHORT ADHESIVE STRIPS ALONG THE UNDERSIDE OF THE BED RAIL.
- 4 PEEL ABOUT 4" OF THE RED BACKING OFF THE LONG ADHESIVE STRIP ON THE UNDERSIDE OF THE RAIL CAP FOLD BACK AND LEAVE HANGING OUT FROM UNDER THE CAP ON THE OUTSIDE OF THE BED.
- 5 PLACE THE CAP ON THE BED RAIL AND APPLY FIRM PRESSURE PULLING OUTWARDS AND DOWNWARDS ENSURING THAT THE INSIDE OF THE CAP IS SECURELY ADHERED TO THE INSIDE OF THE TRUCK BED.
- 6 GRASPING THE HANGING RED BACKING CAREFULLY PULL TO RELEASE IT THE REST OF THE WAY FROM THE LONG ADHESIVE STRIP.
- 7 APPLY FIRM PRESSURE TO THE TOP AND OUTSIDE OF THE CAP TO SECURELY FASTEN IT TO THE BED RAIL.

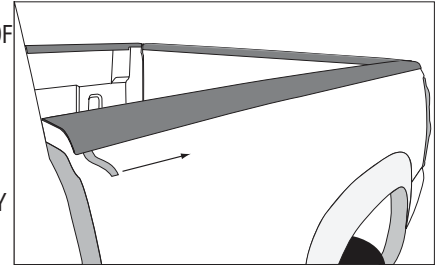

Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219

IDEAL TAPE APPLICATION TEMPERATURE RANGE IS 70-100 DEGREES FAHRENHEIT!


- 1 THOROUGHLY CLEAN THE AREA WHERE THE BED CAPS ARE TO ADHERE.
- 2 BEFORE REMOVING ANY OF THE RED ADHESIVE BACKING TEST FIT THE PART TO ENSURE PROPER FIT.
- 3 ONCE SATISFIED WITH THE FIT, REMOVE THE RED BACKING FROM THE SHORT ADHESIVE STRIPS ALONG THE UNDERSIDE OF THE BED RAIL.
- 4 PEEL ABOUT 4" OF THE RED BACKING OFF THE LONG ADHESIVE STRIP ON THE UNDERSIDE OF THE RAIL CAP FOLD BACK AND LEAVE HANGING OUT FROM UNDER THE CAP ON THE OUTSIDE OF THE BED.
- 5 PLACE THE CAP ON THE BED RAIL AND APPLY FIRM PRESSURE PULLING OUTWARDS AND DOWNWARDS ENSURING THAT THE INSIDE OF THE CAP IS SECURELY ADHERED TO THE INSIDE OF THE TRUCK BED.
- 6 GRASPING THE HANGING RED BACKING CAREFULLY PULL TO RELEASE IT THE REST OF THE WAY FROM THE LONG ADHESIVE STRIP.
- 7 APPLY FIRM PRESSURE TO THE TOP AND OUTSIDE OF THE CAP TO SECURELY FASTEN IT TO THE BED RAIL.

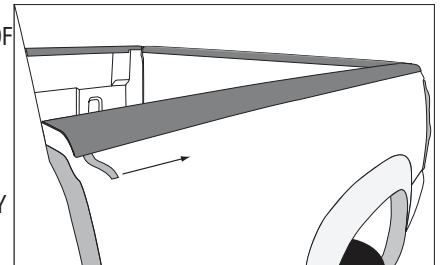

Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219

IDEAL TAPE APPLICATION TEMPERATURE RANGE IS 70-100 DEGREES FAHRENHEIT!

- 1 THOROUGHLY CLEAN THE AREA WHERE THE BED CAPS ARE TO ADHERE.
- 2 BEFORE REMOVING ANY OF THE RED ADHESIVE BACKING TEST FIT THE PART TO ENSURE PROPER FIT.
- 3 ONCE SATISFIED WITH THE FIT, REMOVE THE RED BACKING FROM THE SHORT ADHESIVE STRIPS ALONG THE UNDERSIDE OF THE BED RAIL.
- 4 PEEL ABOUT 4" OF THE RED BACKING OFF THE LONG ADHESIVE STRIP ON THE UNDERSIDE OF THE RAIL CAP FOLD BACK AND LEAVE HANGING OUT FROM UNDER THE CAP ON THE OUTSIDE OF THE BED.
- 5 PLACE THE CAP ON THE BED RAIL AND APPLY FIRM PRESSURE PULLING OUTWARDS AND DOWNWARDS ENSURING THAT THE INSIDE OF THE CAP IS SECURELY ADHERED TO THE INSIDE OF THE TRUCK BED.
- 6 GRASPING THE HANGING RED BACKING CAREFULLY PULL TO RELEASE IT THE REST OF THE WAY FROM THE LONG ADHESIVE STRIP.
- 7 APPLY FIRM PRESSURE TO THE TOP AND OUTSIDE OF THE CAP TO SECURELY FASTEN IT TO THE BED RAIL.

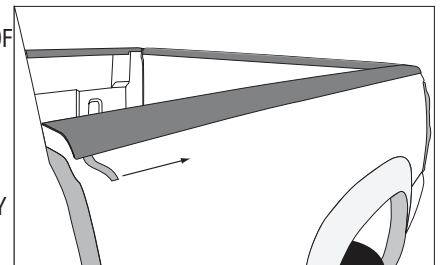

Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219