

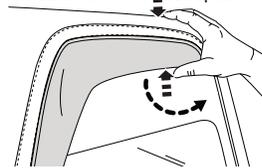


The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.


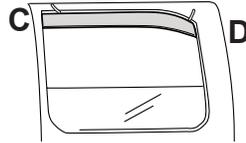


- 1 Roll down window. Buff the inside felt surface with scotch brite pad. Then clean with alcohol pad.
- 2 Remove the tape liner from the front & rear flanges. Peel back 2" of tape liner from each end of top flange. Insert visor into window channel, front flange first.
- 3 Apply pressure to all flange edges to ensure proper adhesion. Remove tape liner by pulling on free ends.
- 4 **NOTE:** It is necessary to both hold the visor up into the window channel **AND** pull the bottom of the visor slightly outward while raising the glass to seat visor properly. See **STEP 4** illustration below.
- 5 Continue to apply pressure to ensure that the visor remains properly seated inside the window channel as window is slowly closed. Leave window up for 72 hours to secure visor to window channel. If the visor does not seat correctly, roll down window and repeat **Step 5**.
- 6 Install the rear visors using the same preparation and installation methods as the front visor. **NOTE:** If your rear visor has a small notch on the side flange, install the notch toward the front of the vehicle. **NOTE:** It is necessary to both hold the visor up into the window channel **AND** pull the bottom of the visor slightly outward while raising the glass to seat visor properly. If the visor does not seat correctly, roll down window and repeat **Step 6**. Repeat **Steps 1 thru 6** for passenger side.

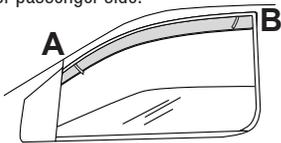

STEP 4




IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-858-5634

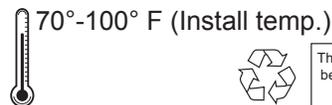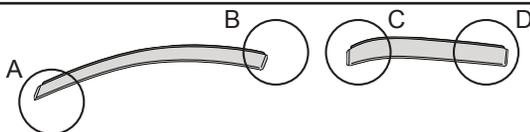

The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



- 1 Roll down window. Buff the inside felt surface with scotch brite pad. Then clean with alcohol pad.
- 2 Remove the tape liner from the front & rear flanges. Peel back 2" of tape liner from each end of top flange. Insert visor into window channel, front flange first.
- 3 Apply pressure to all flange edges to ensure proper adhesion. Remove tape liner by pulling on free ends.
- 4 **NOTE:** It is necessary to both hold the visor up into the window channel **AND** pull the bottom of the visor slightly outward while raising the glass to seat visor properly. See **STEP 4** illustration below.
- 5 Continue to apply pressure to ensure that the visor remains properly seated inside the window channel as window is slowly closed. Leave window up for 72 hours to secure visor to window channel. If the visor does not seat correctly, roll down window and repeat **Step 5**.
- 6 Install the rear visors using the same preparation and installation methods as the front visor. **NOTE:** If your rear visor has a small notch on the side flange, install the notch toward the front of the vehicle. **NOTE:** It is necessary to both hold the visor up into the window channel **AND** pull the bottom of the visor slightly outward while raising the glass to seat visor properly. If the visor does not seat correctly, roll down window and repeat **Step 6**. Repeat **Steps 1 thru 6** for passenger side.

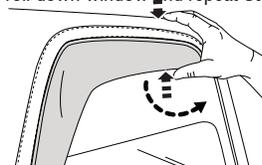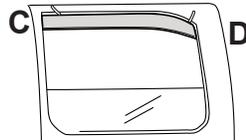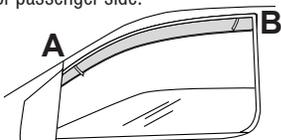

STEP 4

IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-858-5634