

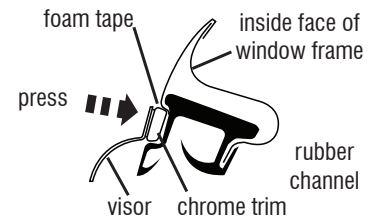




The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.

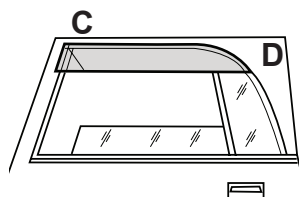

- 1 Clean window frames and chrome trim with an alcohol pad.
- 2 Peel back 2" (5 cm) of tape liner from each end of the lateral flange.
- 3 Align driver side visor with previously cleaned area and apply pressure to exposed tape area.
- 4 Inspect visor positioning. When the visor is in its final position, remove remaining tape liner by pulling on free ends.
- 5 Apply pressure along the length of visor to secure.
- 6 Apply strong pressure along all flanges to ensure proper adhesion of tape.
- 7 The rear visor attaches with the same preparation methods as the front. The lateral flange attaches to the chrome trim and the front flange to the painted surface.

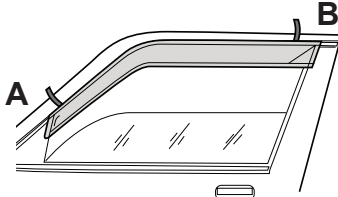




IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-858-5634

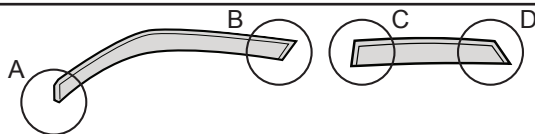

The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



- 1 Clean window frames and chrome trim with an alcohol pad.
- 2 Peel back 2" (5 cm) of tape liner from each end of the lateral flange.
- 3 Align driver side visor with previously cleaned area and apply pressure to exposed tape area.
- 4 Inspect visor positioning. When the visor is in its final position, remove remaining tape liner by pulling on free ends.
- 5 Apply pressure along the length of visor to secure.
- 6 Apply strong pressure along all flanges to ensure proper adhesion of tape.
- 7 The rear visor attaches with the same preparation methods as the front. The lateral flange attaches to the chrome trim and the front flange to the painted surface.

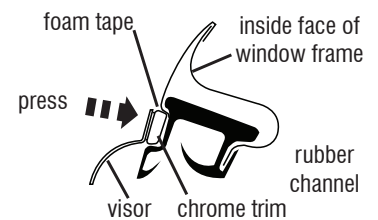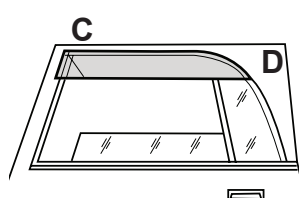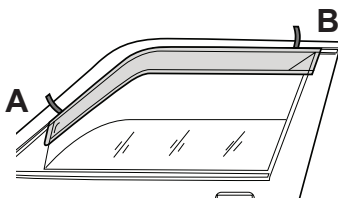

IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-858-5634